
3 Easy Steps to Build Your Fulldive Controller


Step 1: Print out letter sized Page R and L. You do not need to trim the borders.

Step 2: Follow the instructions below to assemble your paper controller.

a1. Lay Page R face down and add an additional piece of paper on top.




a2. Fold the paper twice according to the printed instructions.




a3. Flip the folded paper faced down and staple according to the marks.



b1. Lay Page L face down and add an additional piece of paper on top.



b2. Fold the paper twice according to the printed instructions.



b3. Flip the folded paper faced down and staple according to the marks.



b4. With both panels faced down, tape the two surfaces together.



Step 3: That's it! Launch Fulldive, make sure ''m using Fulldive Controller is checked and do the following.



c1. Insert your thumb in the right panel to hold the controller.

Make sure patterned side faces up.



c2. Hold up your controller with left panel lowered at 45 degrees.

Hold within your phone camera view.



c3. To click, quickly tap your fingers to lift up the left panel.










Insert thumb

Step 1. Mountain fold

ep 2. Valley fold

Page R

Step 1. Mountain fold

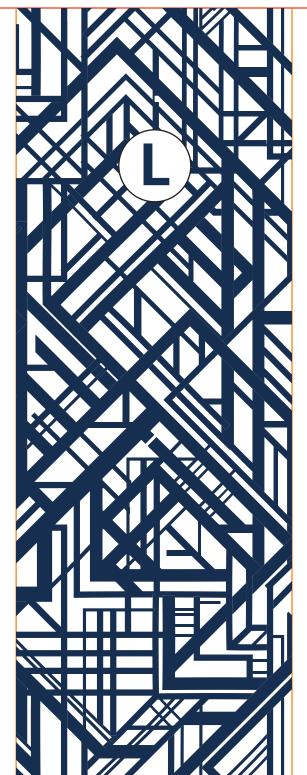

Step 2. Mountain fold

Page L